

ADMIRALTY Digital Sailing Directions (ADSD) Fleet Manager Guide

Contents

Account setup	2
Managing your account	4
Download Permit	4
Update Username	4
Update Password	4
Offline Activation	4
Ordering areas for ADSD	4
B2B	5
Get ADSD Permits	5
Post ADSD Offline Activation	5

Account setup

Note: The licence must already have the relevant AENP tab set up in Fleet Manager.

1. Login to Fleet Manager (<https://enavigator.ukho.gov.uk/login>).

Username:

Password:

[Forgot your password?](#)

2. Select Licence Management then Licences.

Home System User Management Licence Management

- Licences
- Transfer Licence
- Transfer History

3. Search for your licence by entering the ID, vessel name or vessel IMO in the relevant field and pressing enter. Alternatively, use the Search All field and click the search button.

Add Licence | Import from Excel file

Search All:

Show Archived Items | Select Distributor

ID	Type	Fleet Manager	Vessel Name	Vessel IMO
<input type="text"/>	All	<input type="text"/>	<input type="text"/>	<input type="text"/>

4. Double-click the licence, then scroll to ADSD Viewer Registration.

ADSD Viewer Registration

Username: *

Password: *

5. Create a unique username and password (minimum 8 characters, including uppercase, lowercase and a number), then click **Initialise Account**.

The screenshot shows the 'ADSD Viewer Registration' page. At the top, there is a dark blue header with the text 'ADSD Viewer Registration'. Below the header, there are two input fields: 'Username: *' with the value 'SupportVessel12' and 'Password: *' with a masked password '*****'. To the right of the password field is a 'Show' button. Below these fields is a dark blue button labeled 'Initialise Account'.

6. Your username will now appear in the ADSD Viewer Registration section, along with options to download permits, update your username or password, and activate offline.

The screenshot shows the 'ADSD Viewer Registration' page. At the top, there is a dark blue header with the text 'ADSD Viewer Registration'. Below the header, the text 'Username: SupportVessel12' is displayed. Below this, there are four tabs: 'Download Permit', 'Update Username', 'Update Password', and 'Offline Activation'. The 'Download Permit' tab is selected. Below the tabs is a large white rectangular area containing a dark blue button labeled 'Download Permits'.

7. Click **Download Permits** to create your first permit file. This will make your current e-NP holdings available in ADSD Viewer.

Managing your account

There are four options in Fleet Manager: Download Permit, Update Username, Update Password and Offline Activation.

Download Permit

Click **Download Permit** to retrieve your permit file.

Update Username


Enter your new username and click **Save**. The new username will appear on screen.

Update Password

Enter your new password and click **Save**. A confirmation message will appear.

Offline Activation

1. Click **Select** to upload the activation file.
2. Click **Download Offline Activation File** to retrieve the file.

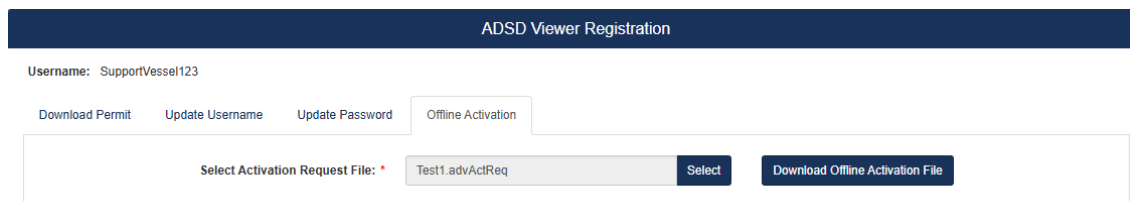

The screenshot shows the 'ADSD Viewer Registration' interface. At the top, the username 'SupportVessel123' is displayed. Below this, there are four tabs: 'Download Permit', 'Update Username', 'Update Password', and 'Offline Activation'. The 'Offline Activation' tab is selected. In the main area, there is a text input field labeled 'Select Activation Request File: *' containing the text 'Test1.advActReq'. To the right of the input field are two buttons: a 'Select' button and a 'Download Offline Activation File' button.

Note: The activation file must be generated from the ADSD software and match the correct licence.

Ordering areas for ADSD

1. Order an e-NP using your usual method.
2. Download the ADSD Permit via the **Get ADSD Permit B2B** function or by selecting **Download Permit** in Fleet Manager
3. Share the order confirmation and permit file with your customer or vessel.
4. Once you've completed the order and downloaded the permit, the new area will appear in ADSD software after an online or offline update (see the vessel playbook for details).

B2B

There are two new B2B calls to support ADSD, outlined below.

Full API definitions are available at: <https://api-developer.admiralty.co.uk/>.

Get ADSD Permits

Note: This call replicates the **Download Permit** functionality in Fleet Manager.

Get ADSD Permits follows the same structure as our current Get Permit API calls.

The endpoint for this API is <https://api.admiralty.co.uk/live/permits/ADSD/{licenceld}>.

Post ADSD Offline Activation

Note: This call replicates the **Download Offline Activation** functionality in Fleet Manager.

The Post ADSD Offline Activation is a new call. The endpoint for this is <https://api.admiralty.co.uk/live/permits/ADSD/{licenceld}/offlineActivation>.

In the request body of this call, you must provide the Activation file generated from the ADSD software for the correct license.